


# For Ledgestone, Traditional & Sandstone Series

(Note: Use detail 6.0.2 for Bluestone or Otago Series)

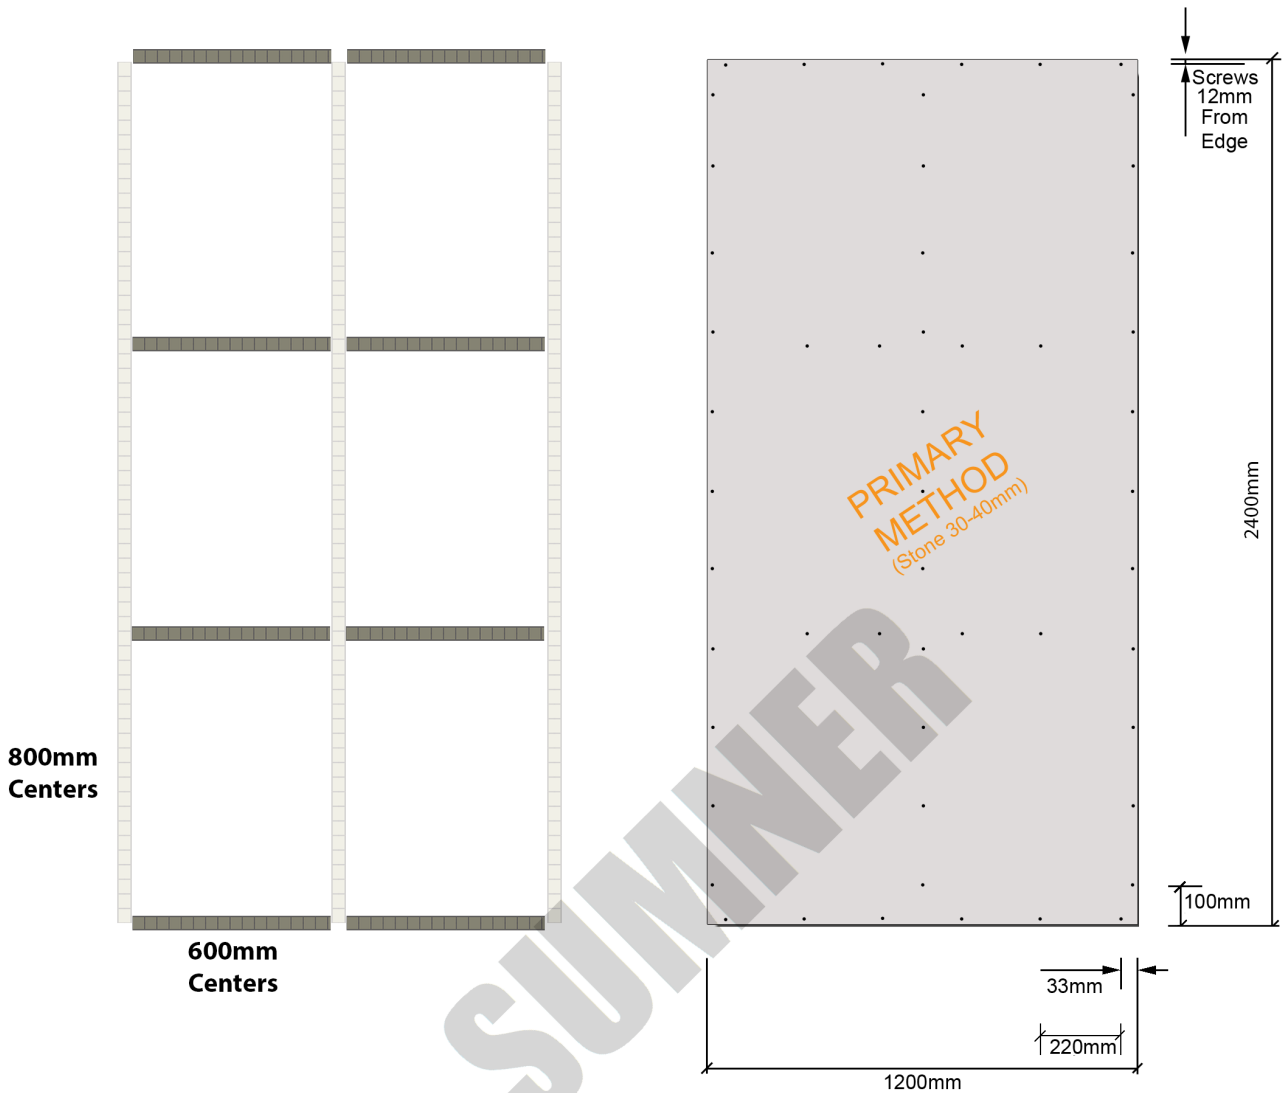

Start by filling out the builders **Cavity Check Sheet 9.1.1**. Download the most recent version from [www.sumnerschist.co.nz](http://www.sumnerschist.co.nz)

Next ensure the building wrap is installed.

Fit flashings to seal, or to drain water to the outside face of the cladding. Flashings are job specific and are to be supplied and fitted by the LBP builder. These may include a uPVC cavity closer which is used at the foot of the cavity. Other flashings may include a window head flashing, internal or external corner flashings, or other metal system flashings folded as the project requires, and window sill trays.

Next align SUMNER battens over studs and nogs, tack in place with galvanized clout.

Horizontal 1Lm battens are placed at 800mm vertical centers.

Vertical 2Lm battens are placed at 600mm horizontal centers.

Srew fix at 220mm centers, 12mm in from the edge of the sheet ensuring that the screws make a purchase to the structural wall behind.

Do NOT countersink screw heads, but instead leave them 2mm proud of the SUMNER Board.

6.0.1	<b>Sumner Board Fixing Detail</b> Ledge and Traditional Series (25-40mm)	SCALE	NTS	DATE	AUGUST 2014
				Original Stone Co Ltd PO Box 125 029, St Heliers Auckland 0800 157 340	